

Office Dongle

The laserDESK Office Dongle serves exclusively to create and store laserDESK jobs. This comprises the execution of all features for creating and the integration of all control elements.

Depending on the functional range (Premium or Standard Edition), the camera and tile features can be used.

However, its not possible to address the hardware. Initialization of the RTC5 PC interface board and hardware control are locked.

If the remote control functionality is released, it can be used. But all functions for hardware control will be acknowledged with an error message.

To make the Office Dongle work properly, laserDESK version **1.0.7.5** must be used! Using older laserDESK versions, some features for creating are locked.

Installing the laserDESK Software

(V 1.0.7.5 or higher)

- ▶ If you want to install laserDESK from a software CD, insert the CD into the optical drive of your PC. An installation routine will be started automatically.
- ▶ Else, launch the 'laserDESKx64_installer.exe' file from the 'Setup' directory in the software package.
- ▶ An installation routine will run automatically in the Windows Installer. Follow the installation routine's instructions.
- ▶ If the query "Delete old version?" appears during installation, you agree to uninstall the old software version.